 



PRITOM

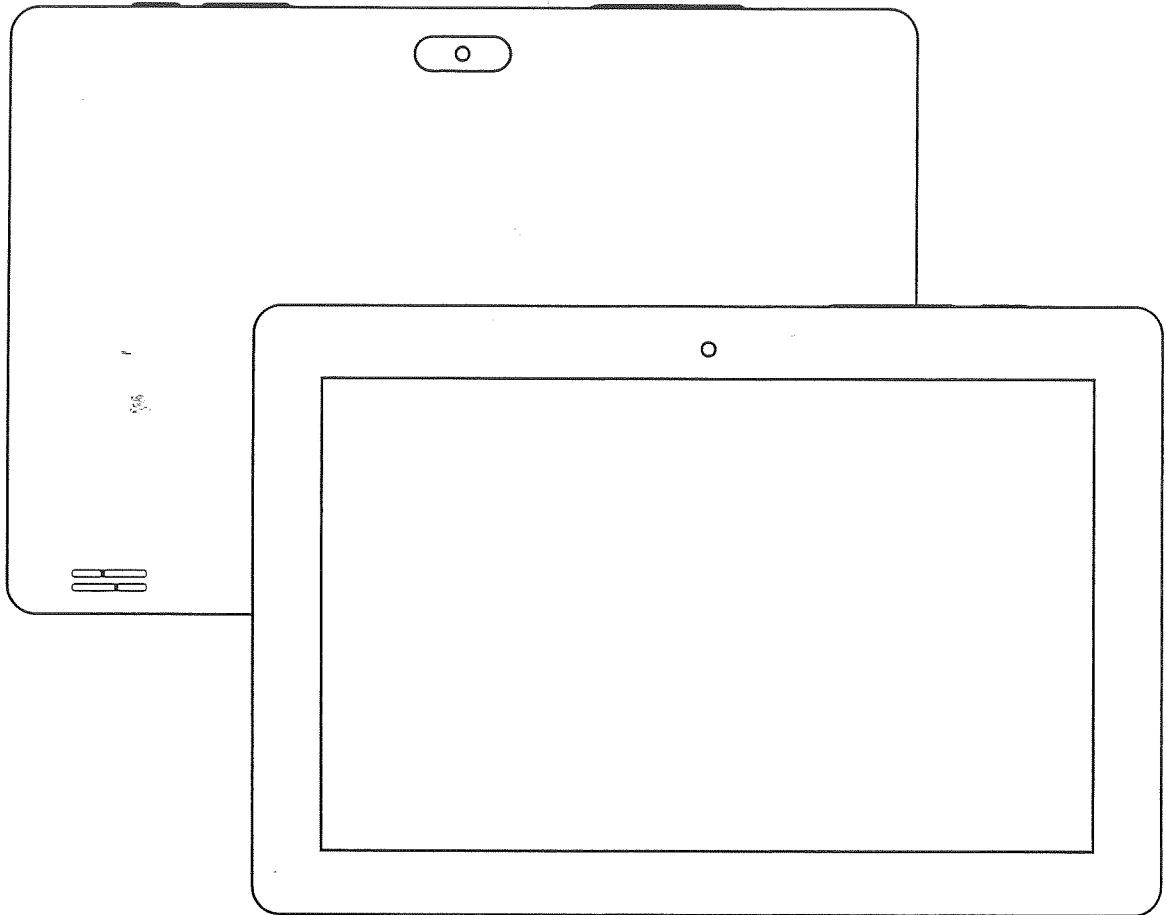

ELSACO M10 Air

USER GUIDE

 Please read this instruction throughly before using this product and keep it for future reference.

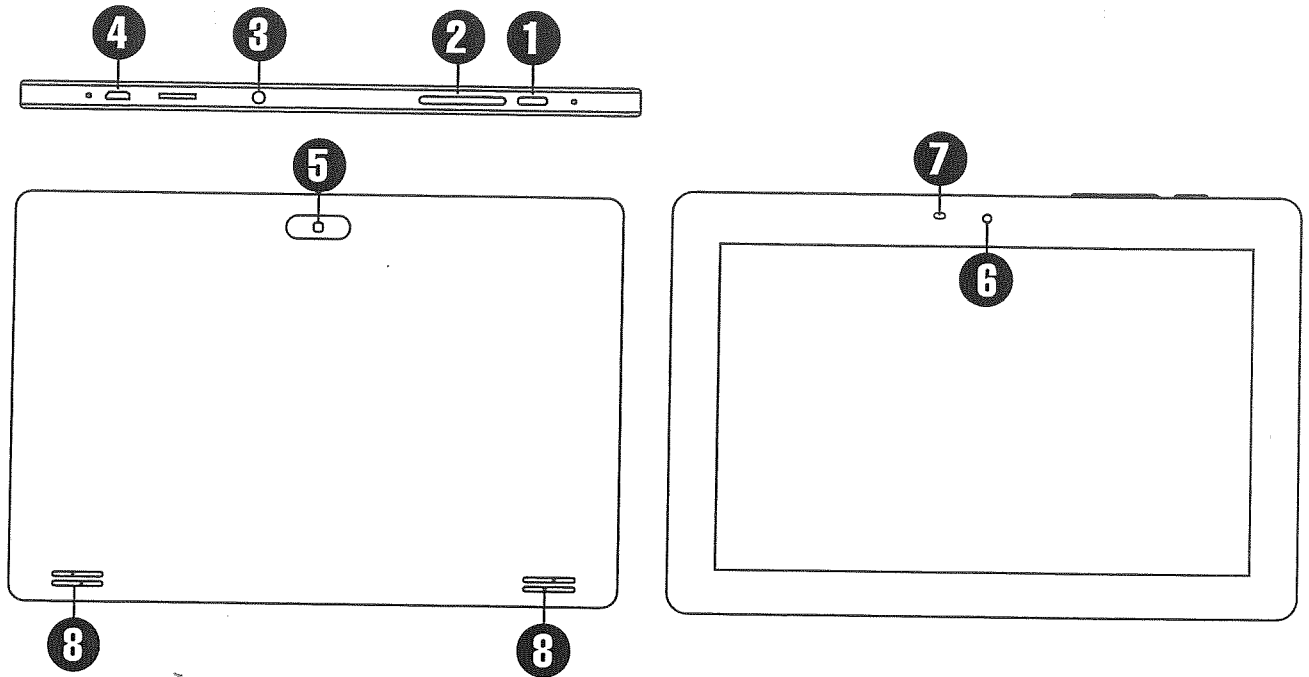


1 The Product

1.1 Appearance and description of the device

- | | |
|---|-----------------|
| 1. Power / Lock / Unlock | 6. Front camera |
| 2. Volume +/- | 7. L/P sensor |
| 3. 3,5mm audio jack | 8. Speakers |
| 4. microUSB charger
and data connect | |
| 5. Back camera | |

UNPACKING:

 Your device should come securely packaged in its shipping container along with the items listed below. Contact your dealer immediately if you find that anything is missing or damaged. Note, however, that contents may be changed without notice.

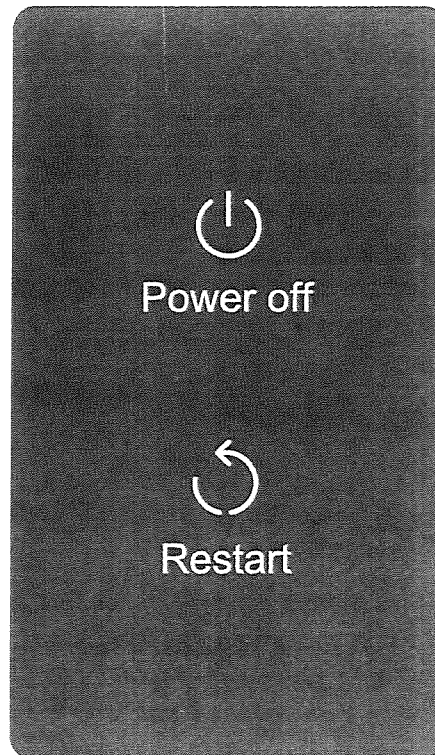

2 Starting up your device

To start your device, press and hold the Power Key for seconds
To power on your device, press and hold the power button for 5 seconds and tap "OK" to power it on, when the automatic dialogue box appears.

In the operating mode, shortly press the Power Key to lock the screen or enter sleep mode.








In the operating mode, shortly press the Power Key and glide the locked icon on to the unlocked icon, in order to unlock.

While in function, the device can automatically enter stand-by, if this option is enabled, after a preset period of time.
















If your device gets blocked during use, you can perform forced restart, by using the Reboot button.


3 The main interface

3.1 Permanent keys

-  Press this icon to return to the previous page.
-  Press this icon to access the applications running in the background.
-  Press this icon to go to your home screen.
-  The strength of the wireless signal.
-  Battery status icon.
-  Press Google™ search for a quick search of the information you need.
-  The strength of the 4G signal, when active.

3.2 Settings option

- | | | | |
|---|----------------------|---|---------------------------------------|
|  | Network & Internet |  | Accessibility |
|  | Connected devices |  | Google |
|  | Apps & notifications |  | System |
|  | Battery |  | Scheduled power on/off |
|  | Display |  | Privacy |
|  | Sound |  | Location |
|  | Storage |  | Security |
|  | DuraSpeed |  | Smart controls |
|  | Security & location |  | Digital Wellbeing & parental controls |
|  | Users & accounts |  | About tablet |

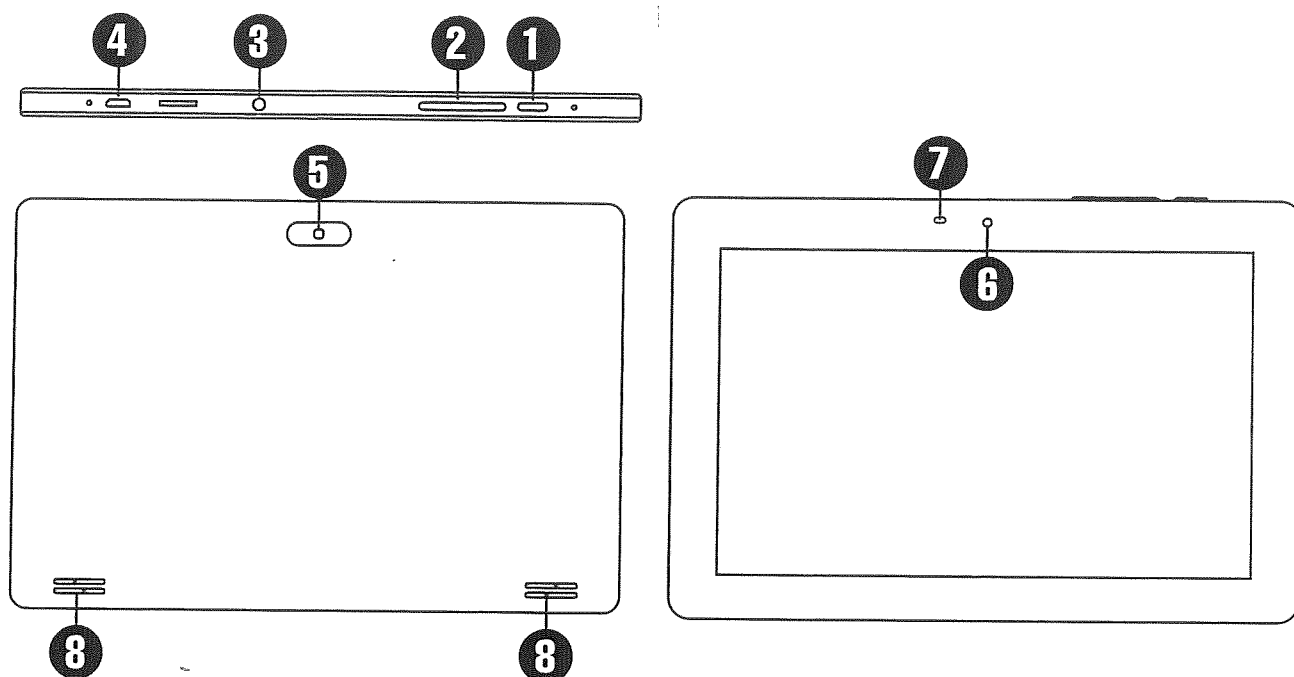 

1 Produsul

1.1 Aspectul și descrierea dispozitivului

- | | |
|---|------------------------------------|
| 1. Pornire / Blocare
Deblocare | 6. Cameră frontală |
| 2. Volum +/- | 7. Senzor lumină
și proximitate |
| 3. 3.5mm audio jack | 8. Difuzoare tabletă |
| 4. Conector microUSB
încărcare și date | |
| 5. Cameră spate | |

DESPACHETARE:

Dispozitivul dvs. ar trebui să vină ambalat în siguranță, în cutia sa de transport, împreună cu accesoriile prezentate pe cutia produsului. Luați legătura cu distribuitorul imediat dacă observați diferențe sau ambalajul este deteriorat. Cu toate acestea, conținutul poate fi modificat fără notificare prealabilă.



2 Starting up your device

Pentru pornire țineți apăsată 5 secunde tasta Pornire. Pentru închidere țineți apăsată 5 secunde tasta Pornire și alegeți opțiunea Opriti Alimentarea din fereastra afișată automat.








În modul de funcționare, pentru blocare, apăsați scurt Tasta Pornire. În modul de funcționare, pentru deblocare, apăsați scurt tasta Pornire și glisați în sus cu degetul pictograma de deblocare. În timpul funcționării, dispozitivul poate intra automat în stand-by, dacă această opțiune este activată, după o perioadă de timp prestabilită.

Dacă în timpul utilizării dispozitivul se blochează se poate efectua o repornire forțată folosind butonul Resetare/ Reboot.

Pentru ajustarea volumului apăsați tasta Volum.

3 Interfața principală

3.1 Taste permanente

-  Apăsați această pictogramă pentru a reveni la pagina anterioară.
-  Apăsați această pictogramă pentru accesarea aplicațiilor care rulează pe fundal.
-  Apăsați această pictogramă pentru pagina de start în orice aplicație.
-  Pictograma de putere a semnalului wireless.
-  Pictograma de stare a bateriei.
-  Apăsați această pictogramă pentru o căutare rapidă a informațiilor care vă sunt necesare.
-  Pictograma de putere a semnalului 4G.

3.2 Opțiunea setări

- | | | | |
|---|-------------------------|---|--|
|  | Rețea și internet |  | Accesibilitate |
|  | Dispozitive conectate |  | Google |
|  | Aplicații și notificări |  | Sistem |
|  | Baterie |  | Pornire/oprire programată |
|  | Afișaj |  | Confidențialitate |
|  | Sunet |  | Locație |
|  | Stocare |  | Securitate |
|  | DuraSpeed |  | Smart controls |
|  | Securitate și locație |  | Bunăstare digitală și control parental |
|  | Utilizatori și conturi |  | Despre tabletă |

PRITOM

CE

